

1 B-43 Upgrade Corner Brook Frequency

2 Q. Re: Tab H, Section 3 – Why is NLH’s Stephenville office responsible for the
3 maintenance of the frequency converter located in Corner Brook?

4

5

6 A. Hydro’s main regional offices are located at Bishop’s Falls, Port Saunders
7 and Happy Valley-Goose Bay. Each of these regions has a number of small
8 centers from which crews operate. The Bishop’s Falls region has
9 transmission and terminals maintenance centers in Whitbourne, Bishop’s
10 Falls and Stephenville. Crews operate from these central locations to
11 maintain the transmission systems and terminals on the main grid. There are
12 no crews operating from Corner Brook.

13

14 The crews operating from the Stephenville center cover the area from
15 Burgeo to Howley. This includes the converter and station equipment in and
16 around Corner Brook.